
T2 Terminator Tooling



Application Tooling Specification Sheet

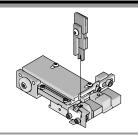

Order No. 63912-0700

FEATURES

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

SCOPE


Products: .070 Male Crimp Terminals, 24-26 AWG.

Torminal	Wire Size			Insulation	Strip Length				
			IPC/WHMA-A60 (1)		Termi	nal (2)	Suip Lengui		
Order No.	AWG	mm²	mm	ln.	mm	ln.	mm	ln.	
35745-0410	24	0.20	1.32-1.45	.052057	1.32-1.45	.052057	4.0-4.8	.157189	
	26	0.12							
35747-0410	24	0.20	1.32-1.45	1 32-1 //5	052-057	1 32-1 //5	052-057	10-18	.157189
	26	0.12		.0024.007	1.52-1.45	.002001	4.0-4.0	.107103	
		Order No. AWG 35745-0410 24 35747-0410 24		AWG mm² mm 35745-0410 24 0.20 1.32-1.45 35747-0410 24 0.20 1.32-1.45	Terminal Order No. Wire Size IPC/WHMA-A60 (1) AWG mm² mm In. 35745-0410 24 0.20 1.32-1.45 .052057 35747-0410 24 0.20 1.32-1.45 .052057	Order No. IPC/WHMA-A60 (1) Termi AWG mm² mm In. mm 35745-0410 24 0.20 1.32-1.45 .052057 1.32-1.45 35747-0410 24 0.20 1.32-1.45 .052057 1.32-1.45	Terminal Order No. Wire Size IPC/WHMA-A60 (1) Terminal (2) AWG mm² mm In. mm In. 35745-0410 24 0.20 1.32-1.45 .052057 1.32-1.45 .052057 35747-0410 24 0.20 1.32-1.45 .052057 1.32-1.45 .052057	Terminal Order No. Wire Size IPC/WHMA-A60 (1) Terminal (2) Strip AWG mm² mm In. mm In. mm 35745-0410 24 0.20 1.32-1.45 .052057 1.32-1.45 .052057 4.0-4.8 35747-0410 24 0.20 1.32-1.45 .052057 1.32-1.45 .052057 4.0-4.8	

(1) To achieve optimum IPC-A620 Class 2 insulation crimps, use this insulation OD.

(2) Overall insulation OD specification for terminal.

DEFINITION OF TERMS

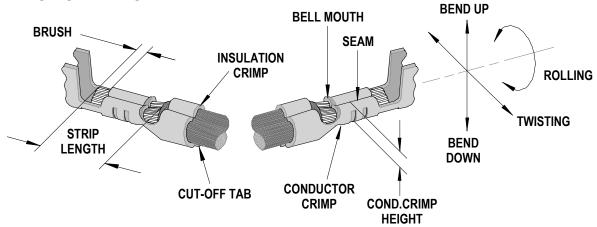

The above terminal drawing is a generic terminal representation. It is not an image of any terminal listed in the scope.

UNCONTROLLED COPY Doc No: ATS-639120700 Release Date: 04-01-10 Page 1 of 6 Revision Date: 07-20-10

Revision: B

CRIMP SPECIFICATION

Terminal Series No.	Bell	mouth	Cut-off Tak	Maximum	Conductor Brush		
Terminal Series No.	mm	ln.	mm	ln.	mm	ln.	
35745	0.2-0.5	.008020	0.40	.016	0.3-0.8	.012032	
35747	0.2-0.5	.008020	0.40	.016	0.3-0.8	.012032	

	Pand up	Bend down	Turiot	Roll	Punch Width (Ref)				0	
Terminal Series No.	Bend up	bena down	Twist	KOII	Conductor		Insulation		Seam	
	Degree		Degree		mm	ln	mm	ln	Seam shall not be open and no wire allowed	
35745	3	3	3	5	1.40	.055	2.30	.091	out of the crimping area	
35747	3	3	3	5	1.40	.055	2.30	.091	out of the offinping area	

After crimping, the crimp profiles should measure the following:

			Conductor				Insulation					Pull Force	
Terminal Wire Size Series No.		Crimp Height		Crimp Width (Ref)		Crimp Height (Ref)		Crimp Width (Ref)		Minimum			
	AWG	mm ²	mm	ln.	mm	ln.	mm	ln.	mm	ln.	N	Lb.	
35745	24	0.20	1.00-1.10	.039043	1.40-1.60	.055063	2.55	.100	2.30-2.50	.091098	29.4	6.61	
33743	26	0.12	0.90-1.00	.035039	1.40-1.60	.055063	2.45	.097	2.30-2.50	.091098	19.6	4.41	
35747	24	0.20	1.00-1.10	.039043	1.40-1.60	.055063	2.55	.100	2.30-2.50	.091098	29.4	6.61	
	26	0.12	0.90-1.00	.035039	1.40-1.60	.055063	2.45	.097	2.30-2.50	.091098	19.6	4.41	

Tool Qualification Notes:


- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.

Doc No: ATS-639120700 Release Date: 04-01-10 **UNCONTROLLED COPY** Page 2 of 6 Revision: B Revision Date: 07-20-10

PARTS LIST

	T2 Terminator 63912-0700									
Item	Order No	er No Engineering No. Description								
	Perishable Tooling									
	63912-0770	63912-0770	Tool Kit (All "Y" Items)	REF						
1	63444-1441	63444-1441	Conductor Punch	1 Y						
2	63445-1467	63445-1467	Conductor Anvil	1 Y						
3	63446-2313	63446-2313	Insulation Punch	1 Y						
4	63445-2315	63445-2315	Insulation Anvil	1 Y						
5	63443-0002	63443-0002	Front Cut-Off Plunger	1 Y						
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y						
		Other Con	nponents							
7	11-17-0022	1739-21	Hold Down Spring	1						
8	11-18-4083	60707-8	Feed Guide	1						
9	11-24-1067	4996-4	Cut-off Plunger Spring	1						
10	11-40-4039	8302-5	Front Plunger Striker	1						
11	63443-0009	63443-0009	Front Scrap Chute	1						
12	63443-0024	63443-0024	Key	1						
13	63443-0085	63443-0085	Wire Stop L-Bracket	1						
14	63443-0090	63443-0090	Wire Stop	1						
15	63443-0093	63443-0093	Shank	1						
16	63443-1715	63443-1715	18.50mm Height Spacer	1						
17	63443-2214	63443-2214	14.00mm Spacer	1						
18	63443-2319	63443-2319	3.95mm Spacer	1						
19	63443-6011	63443-6011	Rear Cover	1						
20	63443-7115	63443-7115	Terminal Hold Down	1						
		Fra	me							
21	63800-8500	63800-8500	T2 Terminator	1						
		Hard								
22	N/A	N/A	M3 by 6 Long FHCS	1**						
23	N/A	N/A	M3 by 6 Long SHCS	2**						
24	N/A	N/A	M3 by 8 Long SHCS	1**						
25	N/A	N/A	M4 by 6 Long SHCS	2**						
26	N/A	N/A	M4 by 12 Long BHCS	2**						
27	N/A	N/A	M4 by 14 Long SHCS	2**						
28	N/A	N/A	M4 by 50 Long SHCS	2**						
29	N/A	N/A	M5 by 12 Long SHCS	1**						
30	N/A	N/A	#10-32 by 3/8"Long BHCS	1**						
** Ava	** Available from an industrial supply company such as MSC (1-800-645-7270).									

UNCONTROLLED COPY Page 3 of 6 Doc No: ATS-639120700 Release Date: 04-01-10 Revision: B

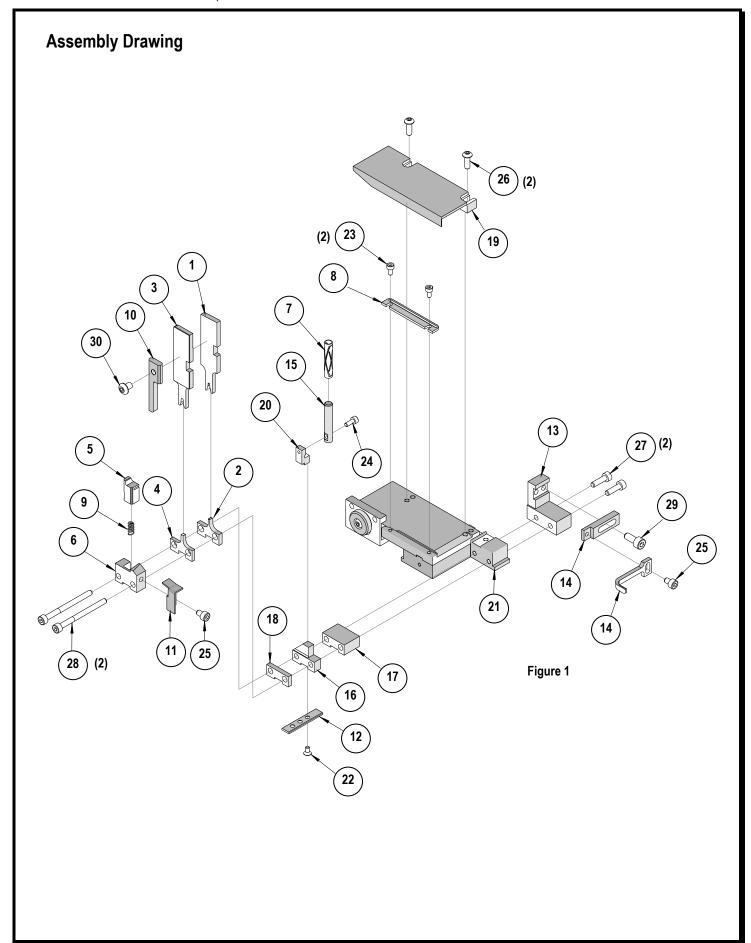


Doc No: ATS-639120700 Revision: B Release Date: 04-01-10 Revision Date: 07-20-10

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

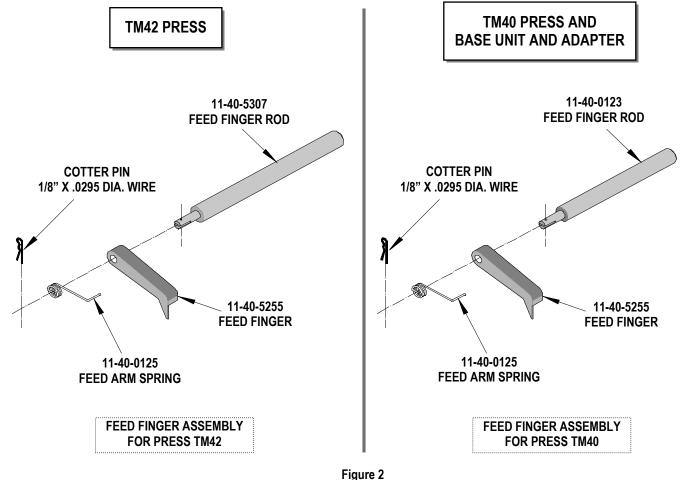

UNCONTROLLED COPY Doc No: ATS-639120700 Release Date: 04-01-10 Page 5 of 6 Revision Date: 07-20-10

Revision: B

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

http://www.molex.com

UNCONTROLLED COPY Doc No: ATS-639120700 Release Date: 04-01-10 Page 6 of 6 Revision Date: 07-20-10

Revision: B